



Unpacking

Before using the device, check the device model and ensure that the shipped box includes the following items:

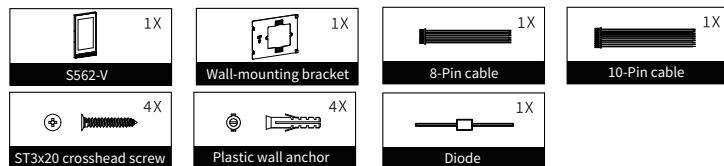

Product Overview

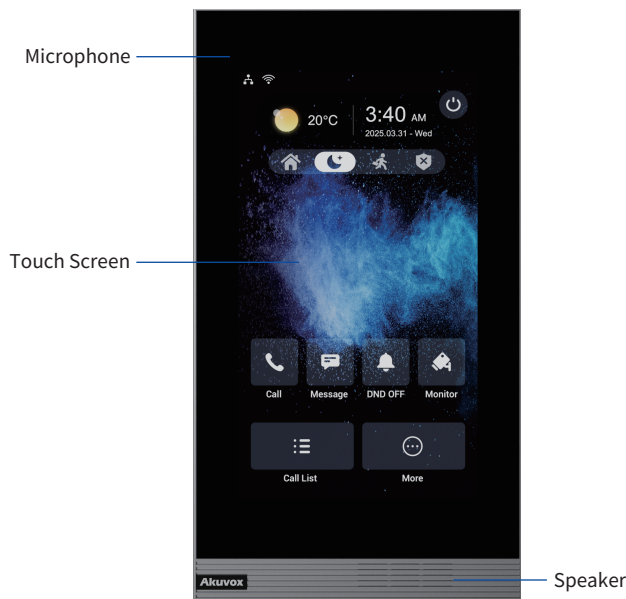

Before You Start

Tools needed

(not included in shipped box)

- Cat Ethernet Cable
- Electric Drill

Voltage and Current Specifications


- It is suggested that use PoE or 12V DC/1A power adapter to power on device.

AWG Sizes and Properties Table

Power Supply	12V DC/1A				
AWG	16	18	20	22	24
Resistance(ohm/km)	13.5	21.4	33.9	48.5	79.6
Cross-sectional Area(mm ²)	1.318	0.8107	0.5189	0.3247	0.2047
Wire Length(m)	≤50	≤50	≤50	≤40	≤20

Requirements


1. Place the device away from sunlight and light sources to prevent potential damage.
2. Do not place the device in the high-temperature, and humid environments or in surroundings impacted by magnetic field.
3. Install the device on the flat surface securely to avoid personal injuries and property loss caused by device's falling.
4. Do not use or place the device near heating objects.
5. Please keep device at least 2 meters away from light, and at least 3 meters away from window and door.

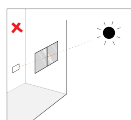

Direct sun through window



Indirect sunlight through window

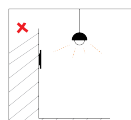

Close to light


Warning!

1. To ensure safety, avoid touching power cord, power adapter, and device with wet hands, bending or pulling the power cord, damaging any components, and use only qualified power adapter and power cord.
2. Be careful that standing up on the area under the device in case of personal injuries cause by hitting the device.


Caution

1. Do not knock device with hard objects.
2. Do not press down hard on the device screen.
3. Do not expose device to chemical products, such as alcohol, acid liquid, disinfectants, and so on.
4. To prevent the device installation from becoming loose, ensure accurate diameters and depths of screw holes. If the screw holes are too large, use glue to secure the screws.
5. Use wet cloth clean device surface softly, and then wipe the surface with dry cloth for cleaning the device.
6. If there is abnormal situation of the device, including uncommon sound and smell, please power off the device and contact Akuvox Technical Team immediately.

Device Wiring

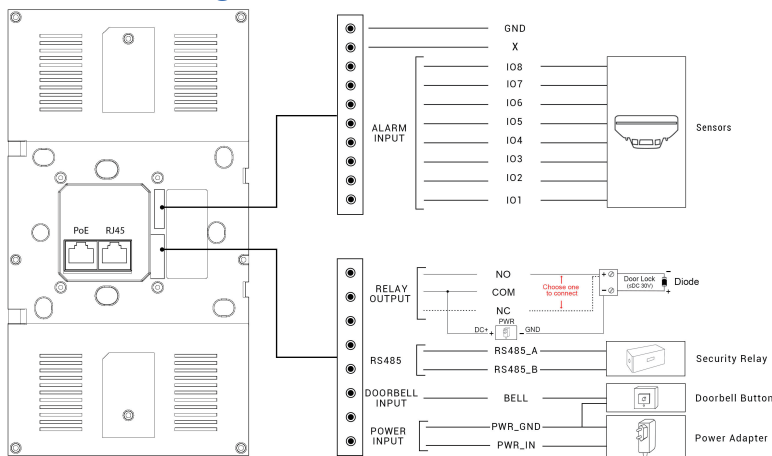

 
To protect the device from potential damage caused by over-voltage, it is recommended to wire a diode into the circuit. Connect the anode of the diode to the negative cable of the lock, and connect the cathode of the diode to the positive cable of the lock.



Installation

Step1: Bracket Installation


With round junction box in the wall

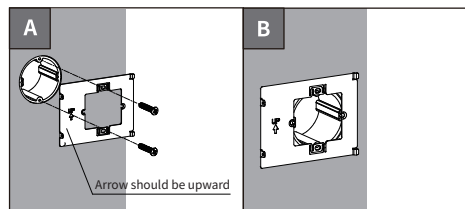


Fix the **wall-mounting bracket** on the round junction box with two **ST3x20 crosshead screws**, please ensure the bracket against to wall.

Note: If needed, secure the remaining two ST3x20 self-tapping screws on the bracket.


Without electrical junction box in the wall

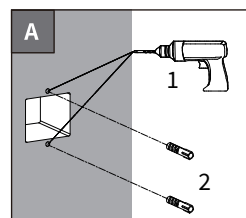

- a. Cut a square hole in the wall based on the cable exit position, measuring 57mm in length, 49mm in width, and 15mm in depth.
- b. As shown in the diagram, use an electric drill two vertical screw holes at the corresponding positions, with a diameter of 5mm and a depth of 20mm. The distance between the two holes should be 60mm.

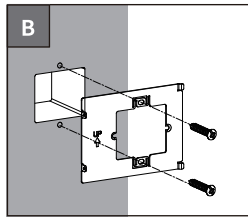


Then insert two **plastic wall anchors** into the holes. Please make sure that the top of plastic wall anchors can not be higher than wall.

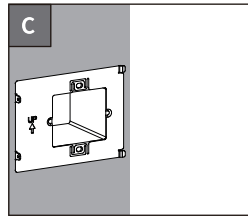


Fix the wall-mounting bracket on the wall with two **ST3x20 crosshead screws**, please ensure the bracket against wall.


Step2: Device Mounting

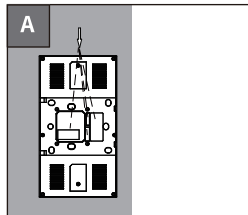

Plug the cables from the wall into corresponding interface on the back cover. (For details, refer to "Wiring Interface")

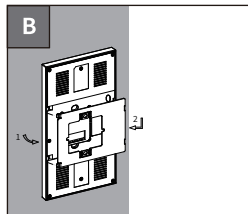

- As shown in the figure, tilt the main unit approximately 15° and hang it on the hooks of the wall-mounting bracket.
- Slide the main unit to the right along the hooks until it reaches the end.
- Rotate it to the left and press it down toward the wall until the wall-mounting bracket engages with the front housing and holds the main unit securely.

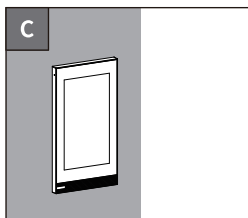

As shown in the figure, secure the main unit to the wall-mounting bracket. Check that the connection is secure. The installation is now complete.

Device Test

Please verify the device status after installation:

- Network:** Navigate to **Setting > Status** to check the device's IP address and network status. Network is working properly if the IP address is obtained.
- Intercom:** Dial the callee's or APT number, and press **Dial** icon to make an audio call or press **Video** icon to make a video call. The call configuration is correct if the call is successful.
- Access Control:** Press **Unlock** icon on the monitor interface to unlock the door.

Warranty

- Akuvox warranty does not cover intentional mechanical damage or destruction caused by improper installation.
- Do not attempt to modify, alternate, maintain, or repair device by yourself. Akuvox warranty does not apply to damages caused by anyone who is not representative of Akuvox or an Akuvox authorized service provider. Please contact Akuvox Technical Team if the device needs to be repaired.

Get Help

For help or more assistance, contact us at:

<https://ticket.akuvox.com/>

support@akuvox.com



Scan the QR code to get more videos, guides, and additional product information.

Notice Information

Akuvox S562-V firmware contains third-party open source software under the terms of the GNU General Public License (GPL). Akuvox is committed to meeting the requirements of the GNU General Public License (GPL) and will make all required source code available. The source code of software under the terms of GNU GPL can be downloaded online, <http://www.akuvox.com/gpl>.

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox's website: <http://www.akuvox.com> © Copyright 2026 Akuvox Ltd. All rights reserved.



Application Network Topology

