





Unpacking

Before using the device, check the device model and ensure that the shipped box includes the following items:




Installation

1. With 86x86 mm junction box

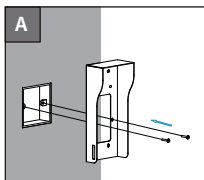


Fix the **rain cover** on the embedded box with two **M4x30 crosshead screws**.

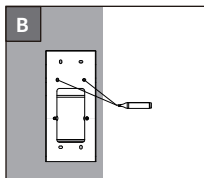


Mark the two holes of the **rain cover** on the wall.

Note:


- The positioning holes should be marked in the center of the holes.
- Additional hole positions can be marked as needed during installation.

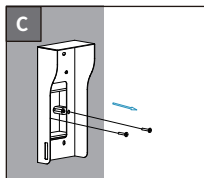


Remove the two **M4x30 crosshead screws** and take off the **rain cover**.

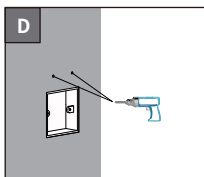


Use a 6mm hand drill with to make two holes with 25mm in depth in the marked positions. Other holes also can be drilled according to the installation requirements.

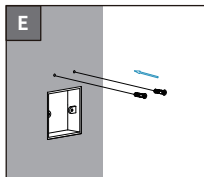

Insert two **plastic wall anchors** in to the two drilled holes.

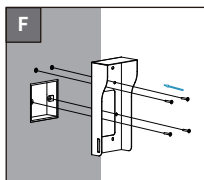


Fix the **rain cover** with two **M4x30 crosshead screws** and two **ST4x20 crosshead screws**.

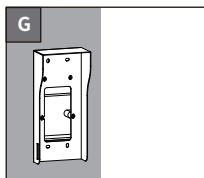


The installation is done.

2. Without electrical junction box in the wall

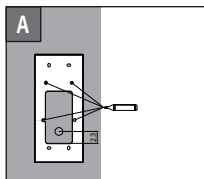


Align the **rain cover** with cable position on wall, mark four holes, ensure correct alignment with wire hole.


Note:
the positioning holes should be marked in the center of the holes.

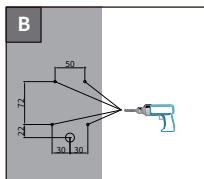


Remove the **rain cover**, drill marked holes with 6mm hand drill.

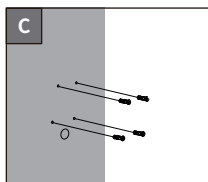

Insert four **plastic wall anchors** into the holes.

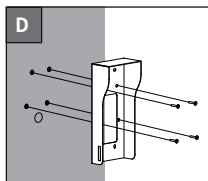

Fix the **rain cover** with four **ST4x20 crosshead screws**.

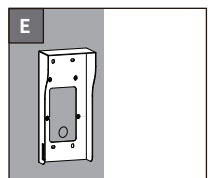

The installation is done.

Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website: <https://www.akuvox.com> © Copyright 2025 Akuvox Ltd. All rights reserved.

